


Applications

- ◎ Ice cream machine
- ◎ Coffee machine
- ◎ Beverage machine
- ◎ Soup machine
- ◎ Water quality sampling



Pump Size

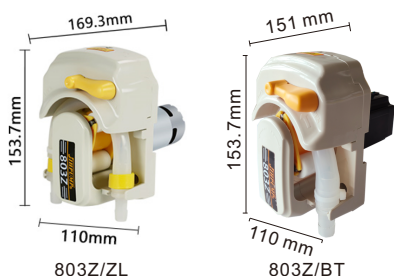


Features

- A new type of versatile peristaltic pump tubing with modular design, can be arranged in U-shape, L-shape, straight-line and other directions.
- Unique adjustable pressure block gap mechanism to adapt to tube wall thickness fluctuations and adjust discharge pressure
- Rotating opening and closing handle, sliding tube compression structure for easy tube installation and removal
- Can accommodate 3.3mm wall thickness tubing for easy transport of high flow viscous liquids
- Pump body base designed with installation connection holes, optional side joint fixing seat as per requirements


Technical Specifications

Pump Model	803Z/ZL		803Z/BT	
Motor Type	Brushed DC		Stepper	
Power supply	DC12V/24V		DC24V/36V	
Power	≤48W		≤36W	
Net Weight	920g		1612g	
Work Environment	Temperature range: 0℃ (no freezing) to 60℃, relative humidity <85%RH			
Output Pressure	≤0.17MPa			
Straight Tubeline - Flow Rate (unit:ml/min)				
rpm Tube#	166r	326r	24V	36V
73#	1660	2700	2400(250r)	3000(300r)
82#	3350	5340	2900(200r)	4780(300r)

Linear

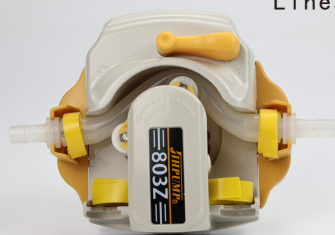

803Z/ZL

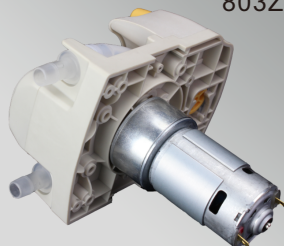

803Z/BT

